


## RT-CCM Mini Ceiling Cup Installation Instructions

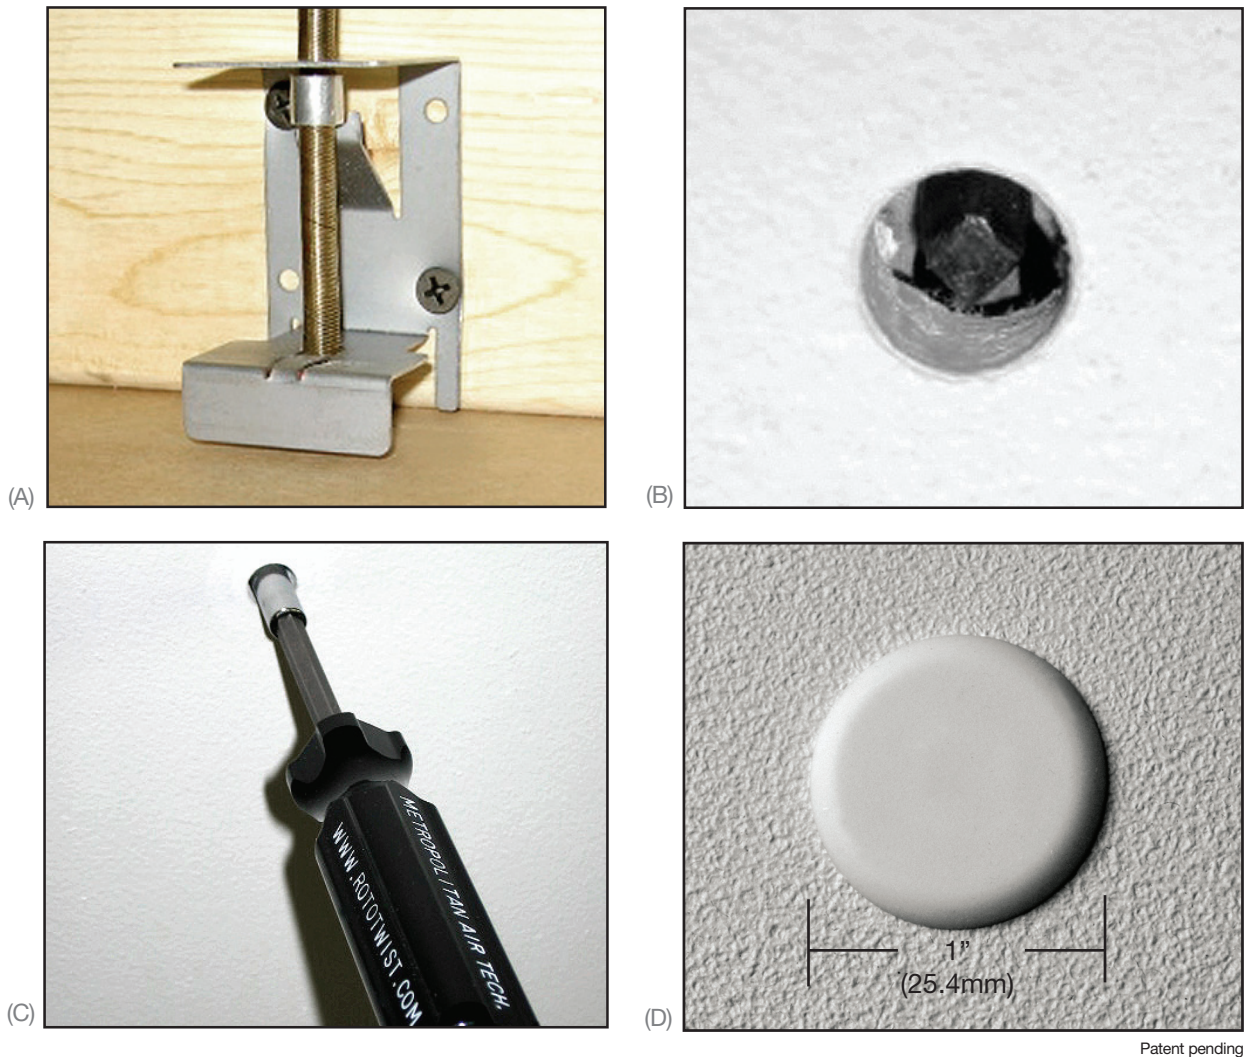

1. Attach the mounting bracket to the structural member so that the bottom of the bracket is flush with the underside of the ceiling. (Illustration 'A')
2. Drill a 1/2" diameter hole in the ceiling that lines up with the centerline of the cable. (7/10" from stud) (Illustration 'B')
3. Attach worm gear to the shaft of the RT-200/250 or other balancing damper. (Not Shown)
4. Use a 1/4" hexnut driver or MAT square nut driver to balance your damper. (Illustration 'C')
5. Select the appropriate RT-CCM cap for the cover (.500" to .750" or .760" to 1.25" ceiling thickness) and attach to exposed cable.
6. Once the appropriate cover is selected, The RT-CCM will provide a smooth and unobtrusive finish to the actuator. (Illustration 'D')