


## Model EB-AB8 Eight Connector Surface Mount Bracket

(for connector termination in a wall or ceiling)


1. Route Connector and wiring through the hole in the bracket. (Photo A)
2. Position the bushing with the snap-in features facing up and slide the wiring through the split opening of the bushing. (Photo B)
3. Push the bushing into the bracket from the bottom side. (Photo C)
4. Push the connector body up through the bushing until it snaps into place. (Photo D)

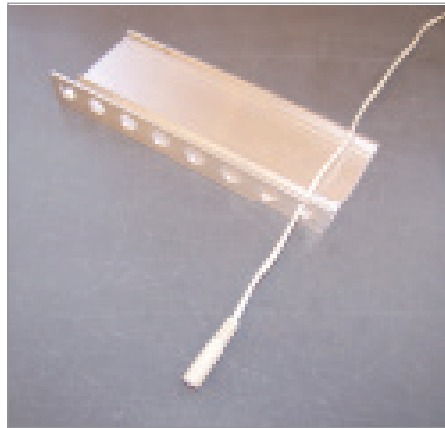

A



B

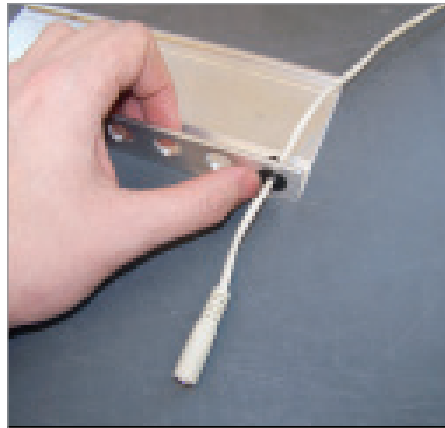

C



D